



AMEC AIS Firmware Upgrade


1. Connect your AIS device with USB port on your PC/Laptop before the firmware upgrade process starts. After AIS device is connected, click on the “AMEC AIS Firmware Upgrade” file, and a main window will pop up as the picture shown below. Click on “Start” to begin the procedure.

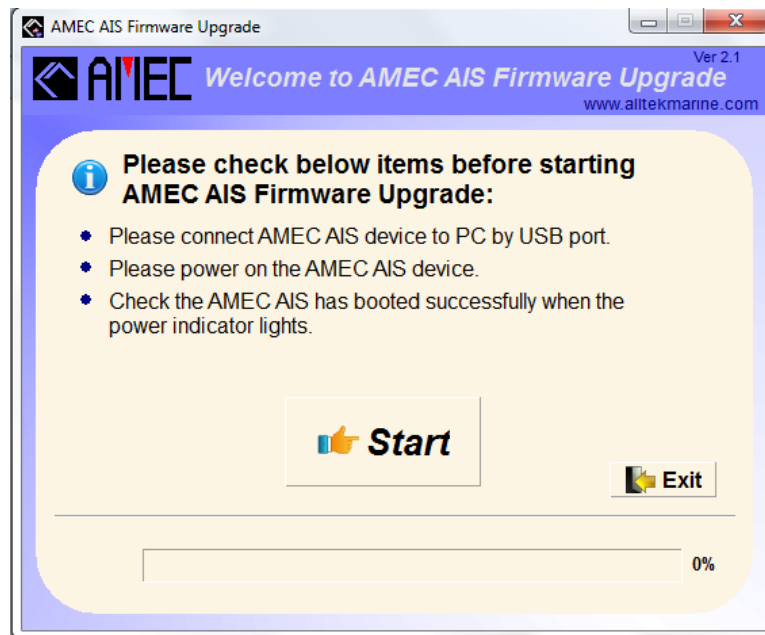

2. There are 2 options to connect the software with your AIS device: manually or automatically.

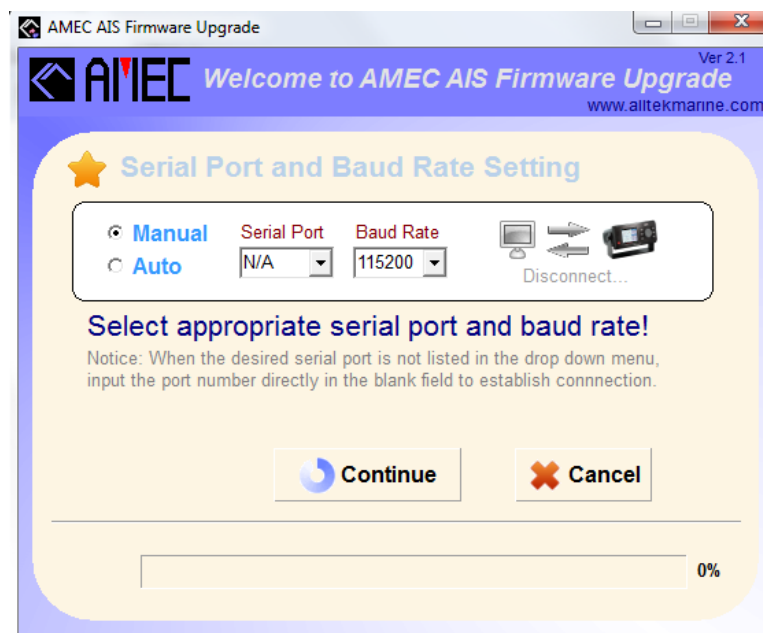


- **Auto:** The system will scan all connected ports and their available baud rates and establish connection automatically.
- **Manual:** Configure baud rate and port manually. The default baud rate is **115200**. Open “Device Manager” in your Windows system to determine the serial port which was created by your device. In the example below it’s COM30.

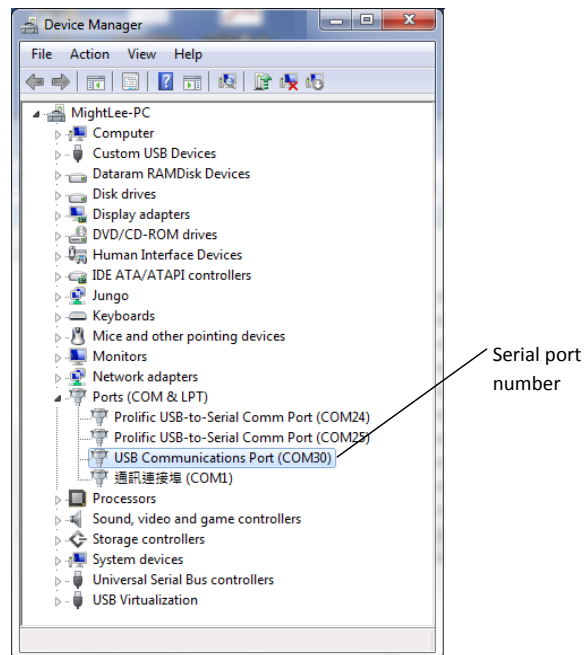

After selecting the connection method, click on “Continue” button.

3. Before firmware upgrade starts, confirm the firmware version at first as the screen shot below demonstrates. Click “Yes” to continue.

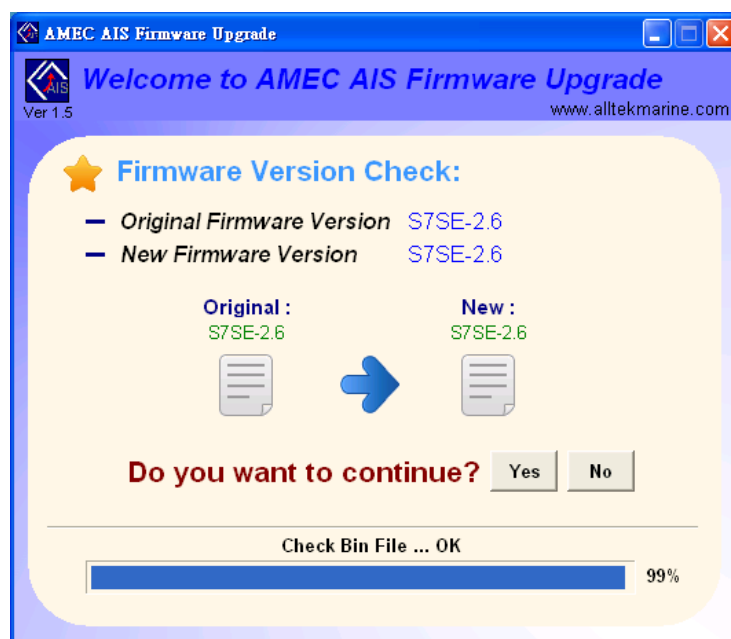

4. After clicking “Yes”, a bar at the bottom of the window will appear indicating the upgrade progress as the picture shown below.



5. After the upgrade process is completed, restart the AIS device.



NOTE1: During the upgrade process, if the system fails, please restart the Firmware Upgrade program. If the problem persists, please contact AMEC for troubleshooting.

NOTE2: After the firmware upgrade is finished, the AIS device will return to the default setting.